



Tire Inflate Ring

✓ The easiest tool to inflate tires.

Tools

Technical Info

Packing

Tire Inflate Ring - medium	706001390
Tire Inflate Ring - large	706002390
Tire Inflate Ring - extra large	706003390

Product

Characteristics

Use

- Apply Novatio Tire Grease on the Tire Inflate Ring.
- Position the Tire Inflate Ring between the heel of the tire and the inside of the rim.
- Put the tire on the floor with the Ring downwards and inflate the tire until the Ring gets off the rim.
- Increase the pressure in case of refusal.